



# TF 830 / 832

# **Oil Burner Safety Control**

For 1- or 2-stage oil power burners up to 30kg/h capacity and intermittent operations.

### Flame detection:

- Photoresistor MZ 770 S
- Infrared-flicker detector IRD 1010
- UV solid state sensor UVD 970

#### **APPLICATION RANGE**

The TF 830 or TF 832 oil burner safety control boxes are suitable to control and monitor oil power burner up to 30 kg/ h capacity (approved and certified according to DIN 4787).

#### **TYPES AVAILABLE**

TF 830	1-stage operation	
	post-ignition time ca. 20 sec.	
TF 832	2-stage operation	
	post-ignition time 2-5 sec.	

#### **CONSTRUCTIONAL FEATURES**

The control box circuitry is protected by a flame resistant, transparent plastic housing. It incorporates the thermomechanical, temperature compensated timer, flame check and reset circuits.

Manual reset from lockout is provided by a push button with an integrated lockout signal lamp. A central fixing screw locks the control box to the wiring base. The wiring base and control box have a positive plug-in arrangement, making it impossible to achieve an incorrect connection between the two parts. A variety of cable entry points provides utmost flexibility of electrical wiring.



The TF 832 is fully compatible with the TF 730, 730-1.

An optional extension button (item no. 70601) compensates for height differences.



00/0401/45

## TECHNICAL DATA

...

...

Operating voltage	220/240V(-15+10%)	
		50 Hz (40-60Hz)
Fuse rating	10 A fast, 6 A slow	
Power consumption	ca. 5 VA	
Max. load per output		
- terminal 3	1.5 A, cos φ 0.2	
- terminal 4	4 A, cos φ 0.4	
- terminal 5	0.5 A, cos φ 0.4	
- terminal 6	0.5 A, cos φ 0.4	
- terminal 7	0.1 A, cos φ 0.4	
total load	5A, cos φ 0.4	
Pre-purge time	ca. 12 sec.	
Pre-ignition time	ca. 12 sec.	
Post-ignition time	TF 830	ca. 40 sec.
	TF 832	ca. 2-5 sec
Delay time to oil valve 2	(TF 832)	40 sec.
Lockout safety time	10 sec.	
Reset time from lockout	ca. 90 sec	
Special version with othe	r timings c	on request
Flame detector:		
MZ 770 S		side-on and end-on
		viewing
Light sensitivity MZ 77	> 6 Lux	
IRD 1010	side-on or end-on	
		viewing
UVD 970	end-on viewing	
Weight incl. wiring base	0.25 kg	
Mounting position	any	
Protection class	IP44	
Recommended ambient of	operating	
temperature for control a	nd	
flame detector	0°C+60°C	

#### **APPLICATION NOTES**

#### 1. Flame control

- The following detectors can be used for flame control:
- For yellow oil flame: photoresistor MZ 770 S
- for blue or yellow flame: infrared-flicker detector type IRD 1010 or as alternative the UV solid state sensor UVD 970.

Using the photo resistor MZ 770 S, the no flame signal is generated at light levels below 3 Lux with respect to the operating cycle of the control. According to DIN 4787 stray light safety level has to be established in conjunction with the accompanying burner.

Connecting the IRD 1010 or the UVD 970, the correct wiring has to be observed.

#### 2. Burner control

For burners without an oil solenoid valve, the burner motor has to be connected to terminal 5.

## 3. Safety

The design and control sequence of the TF 830 and TF 832 control boxes comply with the currently applicable European standards and regulations.

# 4. Mounting and electrical wiring

- Wiring base:
- 3 earth terminals with additional terminal for burner earthing
- 3 neutral terminals with internal permanent connection to neutral terminal (terminal 7)
- 2 spare auxiliary terminals
- 2 slide in plates and 2 easy-knockout holes (PG 11 thread), plus 2 easy-knockout holes in the bottom of the base facilitate the wiring.

#### General:

 The control box can be mounted in any position. The protection class is IP44 (water spray tight). Neither the control box nor the flame detector should be subjected to excessive vibration.

# COMMISSIONING AND ROUTINE CHECKS

#### 1. Important notes

- The controls must be installed by qualified personnel only. The relevant national regulations have to be observed.
- On commissioning the wiring has to be carefully checked according the appropriate diagram, Incorrect wiring can damage the unit and endanger the installation.
- The fuse rating has to ensure that the limits specified in TECHNICAL DATA will not be exceed. If these precautions are not observed, the effect of a short circuit can cause severe damage to the control and installation.
- For safety reasons a minimum of one control shut-down per 24 hours has to be observed.
- Disconnect the mains before the control box is plugged in or out!
- The control box is a safety device and must not be opened!

## 2. Function control

For safety reasons the flame detection system should be tested on commissioning the installation as well as after a service or longer shut-down.

- a) Start-up with covered flame detector
  - After lock-out safety time is over the unit has to go in to lockout mode!
- b) Start-up with exposed flame detector:
  - After 20 sec. pre-purge time the unit has to go into lockout mode!
- c) Normal start-up with burner in the normal position, cover up the flame detector:
  - After start-up, and end of lock-out safety time the unit has to go into lockout mode!

#### 3. Fault findings

- Burner is not working:
- thermostat circuit open
- faulty electrical wiring


Burner starts, but the flame does not establish, a lock out occurs:


- stray light on flame detector
- no ignition or no fuel


Burner starts, the flame establishes, but after the safety time, a lock out occurs:

- dirty or faulty flame detector
- insufficient light on detector
- sensitivity adjustment too low on IRD.

For a quick and safe diagnosis use the Satronic UP 940 burner test box.

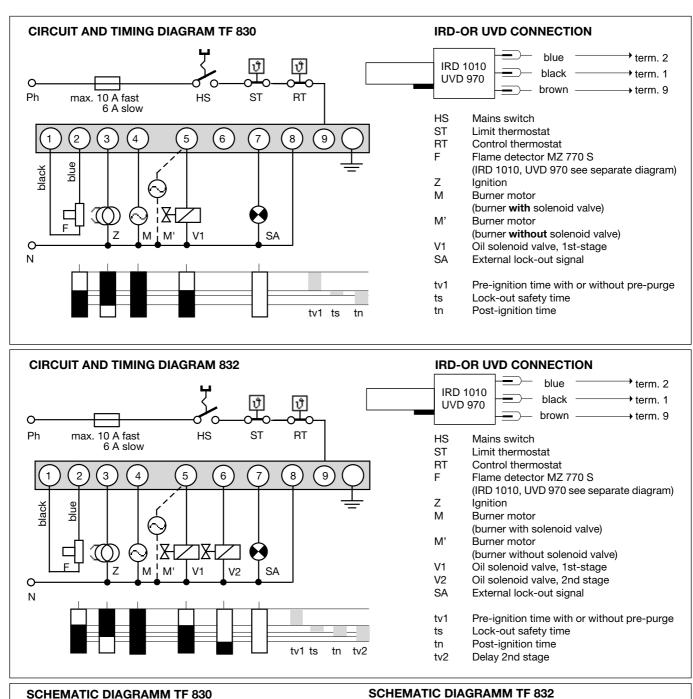

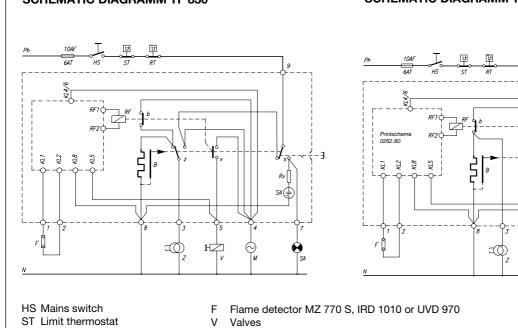

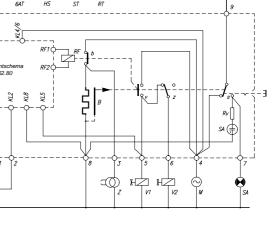


RT Control thermostat

SA Lock-out signal indicator

TF 830/832

- Ignition Ζ
- M Burner motor

- RF Flame relay
- low voltage relay rl
- Thermomechanical timer В
- **RV** Resistor

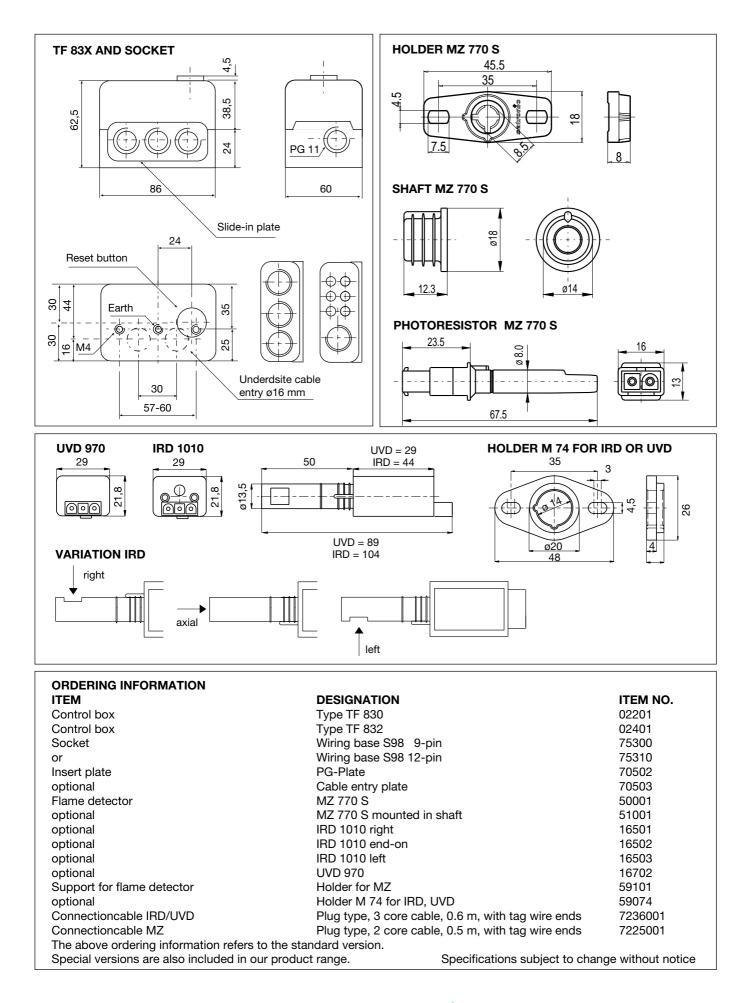

TF 830 / 832



Satronic AG Honeywell-Platz 1 Postfach 324 CH-8157 Dielsdorf